



PADS[®] Layout

Student Workbook

© 1987-2010 Mentor Graphics Corporation
All rights reserved.

This document contains information that is proprietary to Mentor Graphics Corporation. The original recipient of this document may duplicate this document in whole or in part for internal business purposes only, provided that this entire notice appears in all copies. In duplicating any part of this document, the recipient agrees to make every reasonable effort to prevent the unauthorized use and distribution of the proprietary information.

This document is for information and instruction purposes. Mentor Graphics reserves the right to make changes in specifications and other information contained in this publication without prior notice, and the reader should, in all cases, consult Mentor Graphics to determine whether any changes have been made.

The terms and conditions governing the sale and licensing of Mentor Graphics products are set forth in written agreements between Mentor Graphics and its customers. No representation or other affirmation of fact contained in this publication shall be deemed to be a warranty or give rise to any liability of Mentor Graphics whatsoever.

MENTOR GRAPHICS MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

MENTOR GRAPHICS SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING BUT NOT LIMITED TO LOST PROFITS) ARISING OUT OF OR RELATED TO THIS PUBLICATION OR THE INFORMATION CONTAINED IN IT, EVEN IF MENTOR GRAPHICS CORPORATION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

RESTRICTED RIGHTS LEGEND 03/97

U.S. Government Restricted Rights. The SOFTWARE and documentation have been developed entirely at private expense and are commercial computer software provided with restricted rights. Use, duplication or disclosure by the U.S. Government or a U.S. Government subcontractor is subject to the restrictions set forth in the license agreement provided with the software pursuant to DFARS 227.7202-3(a) or as set forth in subparagraph (c)(1) and (2) of the Commercial Computer Software - Restricted Rights clause at FAR 52.227-19, as applicable.

Contractor/manufacturer is:

Mentor Graphics Corporation

8005 S.W. Boeckman Road, Wilsonville, Oregon 97070-7777.

Telephone: 503.685.7000

Toll-Free Telephone: 800.592.2210

Website: www.mentor.com

SupportNet: supportnet.mentor.com/

Send Feedback on Documentation: supportnet.mentor.com/doc_feedback_form

TRADEMARKS: The trademarks, logos and service marks ("Marks") used herein are the property of Mentor Graphics Corporation or other third parties. No one is permitted to use these Marks without the prior written consent of Mentor Graphics or the respective third-party owner. The use herein of a third-party Mark is not an attempt to indicate Mentor Graphics as a source of a product, but is intended to indicate a product from, or associated with, a particular third party. A current list of Mentor Graphics' trademarks may be viewed at: www.mentor.com/trademarks.

End-User License Agreement: You can print a copy of the End-User License Agreement from: www.mentor.com/eula.

Table of Contents

Module 1	
User Interface	9
Objectives	9
What Is PADS Layout?	10
PADS Layout User Interface	11
Standard Toolbar	12
Project Explorer	13
Output Window	14
Global Options	15
Grid Options	16
Assigning Colors to Objects	17
Assign Colors to Multiple Objects	18
Color Configurations	19
Mouse Operation	20
Zooming With the Mouse	21
Selection Filter	22
Selection Modes	23
Context Sensitive RMB Menus	24
Cycle Pick	25
Object Properties	26
Modeless Commands	27
Modeless Example - Setting Layer Visibility	28
Find Dialog Box	29
File Management	30
Exporting Designs	31
PADS Layout Welcome Screen	32
Accessing Help From PADS Layout	33
Accessing Documentation for PADS Layout	34
Accessing the Mentor Ideas for PADS Site	35
Accessing PADS Layout Tutorials	36
SupportNet	37
SupportNet: Choose Your Products	38
SupportNet: Getting Product Updates	39
SupportNet: Getting Help	40
SupportNet: Service Request	41
Mentor Communities	42
PCB System Design Community	43
Mentor Users Group	44
Lab Exercise	45

Module 2	
Drafting	47
Objectives	47
Drafting Toolbar	48
Drafting Options	49
Adding Text	50
Stroke or System Fonts	51
Adding Attribute Labels	52
Adding 2D Line Objects	53
Drawing Options for 2D Lines	54
Modifying 2D Lines	55
Combining Line and Text Items	56
Save or Retrieve 2D Lines From a Library	57
Board Outlines and Cutouts	58
Tip for Locating Board Outline Coordinates	59
Keepouts	60
Dimensioning	61
Dimensioning Options	62
Dimensioning Objects	63
Interfacing With Mechanical CAD tools	64
Lab Exercise	65
Module 3	
Library	67
Objectives	67
PADS Library	68
Library Structure	69
Library Manager	70
List to File	71
Manage Library List	72
Attribute Manager	73
Anatomy of a Part Type	74
Creating New Part Types	75
Part Types – General	76
Part Types – PCB Decals	77
Part Types - Gates	78
Part Types - Pins	79
Part Types - Attributes	80
Part Types - Connector	81
Part Types – Pin Mapping	82
Creating PCB Decals	83
Anatomy of PCB Decal	84
Adding Terminals (Pins)	85
Adding Terminals With Step and Repeat	86
Renumbering Terminals	87
Anatomy of a Pad Stack	88
Defining Pad Stacks	89
Pad Stacks - Modifying	90

Table of Contents

Pad Stacks – Thermal Reliefs	91
Pad Stacks – Drill Size	92
Associating Copper to Pins	93
Defining PCB Decal Keepouts	94
Generate Shapes From Terminals	95
PCB Decal Wizard	96
Pin Mapping	97
Making Local PCB Decal Changes	98
Saving Part Types and PCB Decals to the Library	99
Updating Library Content in Design	100
Lab Exercise	101
Module 4	
Importing and Design Setups	103
Objectives	103
Importing a Netlist	104
PADS Layout Link (From PADS Logic)	105
DxDesigner Link	106
Layer Stackup Definition	107
Layer Types	108
Layer Types - Electrical	109
Layer Types - Planes	110
Increasing Electrical Layer Count	111
Decreasing Electrical Layer Count	112
Layer Thickness	113
Layer Modes	114
Enabling/Disabling Layers	115
Defining Vias	116
Lab Exercise	117
Module 5	
Constraints	119
Objectives	119
Design Rules	120
Design Rule Categories	121
Design Rules Hierarchy	122
Design Rule Entry	123
Design Rule Organization	124
Clearance Rules	125
Same Net Rules	126
Routing Rules	127
Topology Types	128
Routing Options	129
High Speed Rules	130
Creating Net Classes	131
Rule Level Markers	132
Fanout (PADS Router)	133
Pad Entry (PADS Router)	134

Conditional Rules	135
Differential Pairs	136
Rules Report	137
Lab Exercise	138
Module 6	
Placement.....	139
Objectives	139
Part Placement Commands	140
Placement Options	141
Component Move Commands	142
Component Properties	144
Placement and On-Line DRC	145
Group Operations.....	146
Aligning Parts	147
Find Dialog Box.....	148
Unions	149
Component Nudging	150
Gate and Pin Swapping	151
Batch Placement Operations	152
Visual Aides for Placement	153
Creating a Reuse	154
Working With Reuse	155
Schematic-Driven Placement.....	156
Lab Exercise	157
Module 7	
Routing and Route Editing	159
Objectives	159
What Is Routing?.....	160
Design Toolbar	161
Anatomy of Traces and Unroutes	162
What Is On-Line DRC?.....	163
Dynamic Route	164
DRC Violations	165
Plowing With Dynamic Route.....	166
Add Route	167
Routing Commands	168
Adding Vias While Routing	169
Layer Pair.....	170
Vias and Drill Pairs	171
Net Visibility	172
More Net Visibility	173
Lab Exercise	174
Basic Route Editing Commands	175
Other Route Editing Commands	177
Lab Exercise	179
Selection Methods	180

Table of Contents

Copying Traces	182
Rerouting Traces	183
Adding Vias Without Routing	184
Via Properties	185
Trace Protection	186
Vias in Pads	187
Via Patterns	188
Teardrops	189
Smoothing Routes	190
Measuring	191
Other Visibility Features	192
Sketch Route	193
Trace Length Monitor	194
Bus Route	195
Bus Route Via Patterns	196
Autorouting in PADS Layout	197
PADS Router Monitor	198
Routing Statistics	199
Switching to PADS Router	200
Remaining Lab Exercises	201
Module 8	
Copper Generation	203
Objectives	203
What Is Copper?	204
Drafting Toolbar	205
Adding Copper Objects	206
Anatomy of Copper	207
Anatomy of Copper Pour	208
Flooding a Pour Outline	209
Hatch and Flood Options	210
Hatching or Flooding a Hatch Outline	211
Flood and Hatch Overrides	212
Flood Priority	213
Thermal Relief Options	214
What Is a CAM Plane?	215
Custom CAM Plane Thermals in Pad Stack	216
What Are Split/Mixed Planes?	217
Auto Separate of a Split/Mixed Plane	218
Flooding Split/Mixed Planes	219
Other Split/Mixed Plane Options	220
Plane Thermal Issues	221
Chamfered Paths	222
Lab Exercise	223
Module 9	
Design Verification	225
Objectives	225

Verify Design.	226
Error Markers.	227
Clearance.	228
Connectivity.	229
High Speed.	230
Mixed Plane.	231
Fabrication.	232
Latium Design Verification.	233
Other Checks.	234
Lab Exercise.	235
Module 10	
ECO, Reports, and CAM Outputs.	237
Objectives.	237
Managing Basic Scripts.	238
Reports.	239
Custom Reports.	240
Forward and Backward Annotation.	241
The Automated Links.	242
PADS Layout Link (From PADS Logic).	243
DxDesigner Link.	244
Compare/ECO - Documents.	245
Compare/ECO - Comparison.	246
Compare/ECO - Update.	247
Manual ECO Operations.	248
ECO Toolbar.	249
ECO – Add Operations.	250
ECO – Delete Operations.	251
ECO – Rename Operations.	252
ECO – Swap Operations.	253
What Is CAM?.	254
Adding a CAM Document.	255
Setting Layer Options.	256
CAM Document Options.	257
CAM Document Preview.	258
Drill Symbol Options.	259
Photo Plotter Setup.	260
IPC-D-356 Netlist Output.	261
Lab Exercise.	262